

# Error Codes

## Gladiator Series



Code	Problem	Solution
<b>C 101</b>	All machine functions and the traction system are blocked. The temperature of the traction motor has risen above 95°C or the alternator temperature has risen above 150°C.	If you have driven the machine up a slope, let it cool down for 20 minutes. • Make sure the cooling fan is running. • Make sure the brake is disengaged. • Make sure the traction wheels run freely.
<b>C 102</b>	The machine does not start or stops if it was running. There may be a problem affecting the traction system or the fuse.	Turn the machine off, wait 5 minutes and try again. If the problem persists, call the service center.
<b>C 103</b>	A warning message is flashing on the display and the horn sounds off. The temperature of the traction dissipater is at the check temperature of 95°C.	If the ambient temperature is high, stop the machine and wait 20 minutes before restarting.
<b>C 104</b>	All machine functions stop. The temperature of the electronic control circuits is very high (105°C)	If the ambient temperature is high, stop the machine and wait 20 minutes before restarting. If the situation persists, call the service center.
<b>C 105</b>	The machine does not start. Wrong key accelerator sequence.	Leave the accelerator in neutral position before turning on the machine.
<b>C 106</b>	The machine does not start. Interruption of a cable in the potentiometer of the accelerator pedal.	Check the connections of the accelerator pedal potentiometer or the status of the latter.
<b>C 203</b>	A warning message is flashing on the display and the horn sounds off. The temperature of the center brush electronic control circuit is very high (95°C)	If the ambient temperature is high, stop the machine and wait 20 minutes before restarting.
<b>C 204</b>	All machine functions stop. The temperature of the center brush electronic control circuit is very high.	If the ambient temperature is high, stop the machine and wait 20 minutes before restarting. If the situation persists, call the service center.
<b>F 205</b> Acid Battery	All machine function stop, except the traction system. The battery is flat.	Recharge the battery.
<b>F 215</b> Gel Battery	All the machine functions stop, except the traction system. The battery is flat.	Recharge the battery.
<b>F 500</b>	The display is flashing. The center brush is worn.	Replace the brush.
<b>C 999</b>	The machine does not start. The red key for disabling the self-braking function has been removed. Possible problem affecting the cables of the traction motor.	Turn the machine off. Insert the red key and turn it clockwise. Check the cables of the traction motor.
<b>CPUU</b>	The display is flashing. The waste bin is full.	Empty the waste bin.