

This guide is intended for quick consultation only and does not replace the user and maintenance manual. Before using this machine, read the user maintenance manual contained in the machine's packaging and follow all the instructions.

## **PREPARATION AND OPERATION**



Add water and chemical to tank.



Release parking brake.



Power on.



Pull squeegee lever.



Adjust brush pressure.



Adjust water level.

9



Go in forward direction.



Go in reverse direction.

Adjust speed.

## **DAILY MAINTENANCE**



Clean the dirty water tank.



Make sure the detergent tank fill filter is undamaged and clean.



Make sure suction filter is undamaged and clean.



Make sure the brushes are clean and not worn. Replace if necessary.



Make sure detergent outlet filter is clean.



Make sure the squeegee is clean and the blades are not worn.

## **REPLACING THE SQUEEGEE BLADES**





Open the clip (Ref. 1).

Remove the two blade retainers (Ref. 2) by pushing them outwards then extracting them.

Remove the blade.

Reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee.

Reposition the two blade pressing devices by centering the wider part of the slots on the squeegee body fastening pins, then push the blade pressing devices inwards.

Close the hook again.

Replace the squeegee on its support, following the instructions described previously.

# ATTACHING/RELEASING THE DRIVE





### Attaching:

Insert the drive under the head, making sure it rests against the aligners. Hold the button down to lower the head (Ref. 1) until the drive is engaged.

#### **Releasing:**

Lift the head using the lift button (Ref. 1), then press the release button (Ref. 2).