


Rally Quick Guide


This guide is intended for quick consultation only and is not intended to replace the user and maintenance manual. Before using the machine, read the user and maintenance manual contained in the machine's packaging thoroughly and strictly follow all the instructions.

PREPARATION & OPERATION


Fill the solution tank.

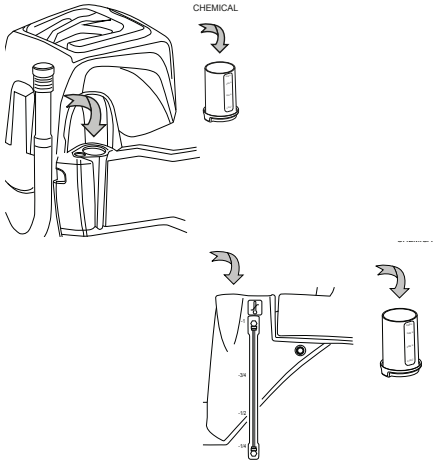


Switch the machine on by turning the ignition key.

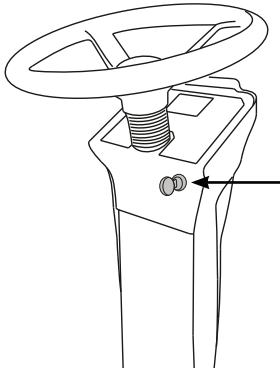


Press the AUTO or ECO button; in both modes, all the machine's functions will be activated. In ECO mode, the machine consumes less energy and operates more silently.

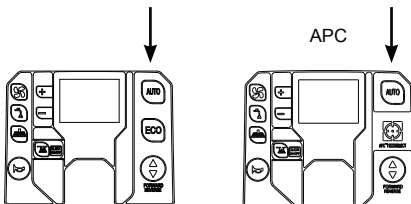


Select the direction of travel.

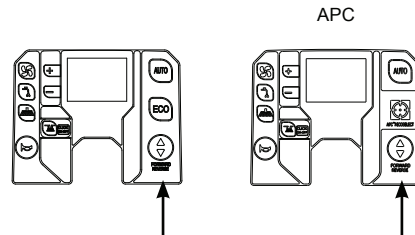

Adjust the machine's speed using the + and - buttons.

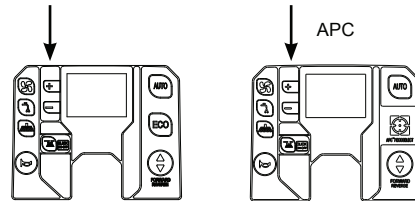


Press the accelerator pedal.

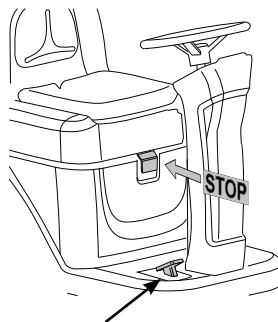

Start work.


When having finished cleaning, proceed as follows:

- Press the AUTO or ECO button to switch off the machine's functions.
- Turn the ignition key.
- Recharge the batteries.

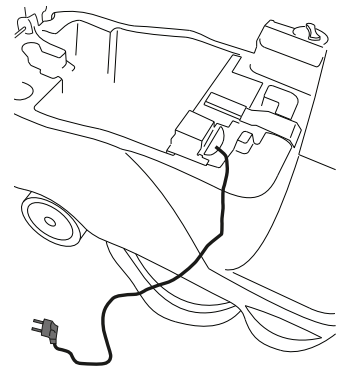

DAILY MAINTENANCE


Empty the dirty water tank through the drain hose

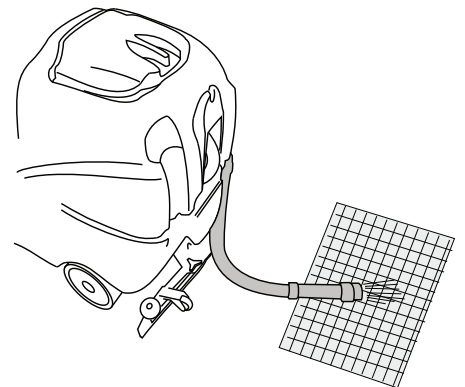



Dustbane Products Ltd.

25 Pickering Pl., Ottawa (Ontario) K1G 5P4
www.dustbane.ca





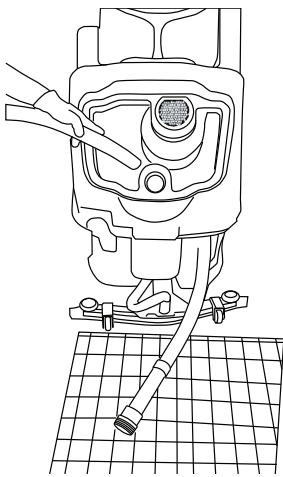


Check that the suction filter is undamaged and clean

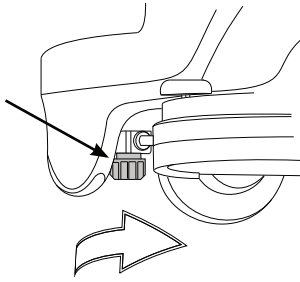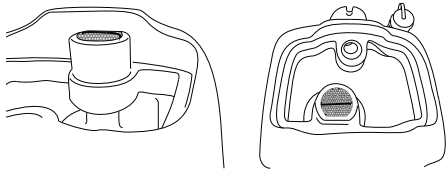

Clean the brushes

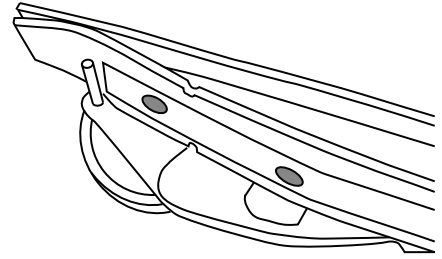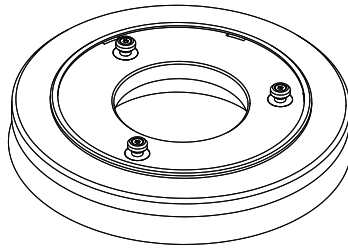


IF THE MACHINE IS NOT USED FOR AN EXTENDED PERIOD, UNPLUG THE EMERGENCY CONNECTOR TO AVOID DISCHARGING THE BATTERIES.

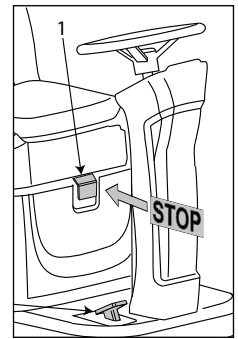

REPLACING THE SQUEEGEE BLADES


- Open the clip (Ref. 1).
- Remove the two blade retainers (Ref. 2) by pushing them outwards then extracting them.
- Remove the blade.
- Reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the pins on the body of the squeegee.
- Reposition the two blade retainers by centring the widest part of the slots over the fixing pins on the squeegee body, then pushing the blade retainers inwards.
- Fasten the clip.
- Put the squeegee back on its support, following the instructions described previously.

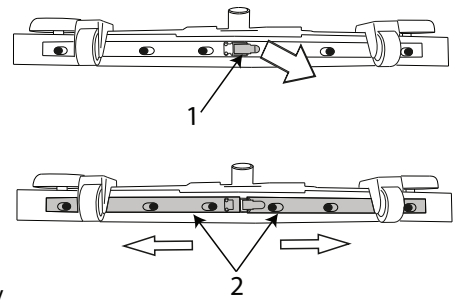

ATTACHING/REMOVING THE BRUSHES

Position the brush underneath the head, in the centre (single-brush floor scrubber), position the brushes underneath the head on both sides (double brush scrubber), switch the machine on.

Pressing the ATTACH/RELEASE button once after starting the machine releases the brushes, pressing the button a second time activates automatic brush attachment. The button is only enabled when all the functions are deactivated (suction motor and brushes).

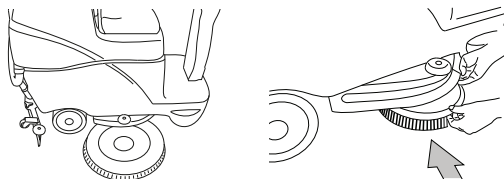

Dustbane Products Ltd.

25 Pickering Pl., Ottawa (Ontario) K1G 5P4
www.dustbane.ca

